


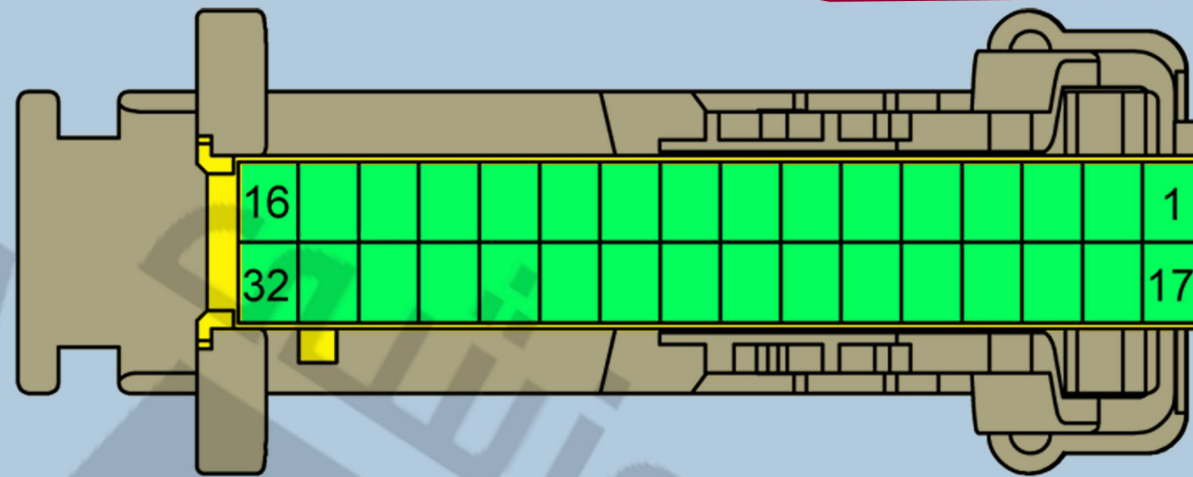

Terminal Definition

Pin No.	Wire diameter/color	Function
1	0.30 V/B	Signal -, external temperature sensor
2	0.50 V/R	Steering wheel switch +
3	0.30 O/B	Charge indicator signal
4	0.30 O/G	Signal, indicator, front passenger seat belt not fastened
5	-	
6	-	
7	-	
8	-	
9	-	
10	-	
11	-	
12	-	
13	0.30 Br/W	Fuel level signal indicator
14	0.30 O/G	Passenger detecting signal
15	0.50 V/Y	Steering wheel switch -
16	0.30 B/Y	Fuel level signal ground
17	0.30 Br	Signal, parking brake indicator
18	0.30 Y/B	Signal, alarm, oil pressure low
19	0.50 W/O	Reversing radar signal
20	0.30 O/W	Signal, indicator, driver seat belt not fastened
21	0.30 BI/B	PCAN-H
22	0.30 BI/W	PCAN-L
23	0.85 R/BI	IG power supply
24	0.50 R/G	Power supply, battery
25	0.50 B	Signal ground
26	-	
27	0.30 G	Vehicle speed signal output
28	0.30 R/Y	ACC power supply
29	-	
30	0.30 BI	Reverse signal input
31	0.30 V/W	Signal +, external temperature sensor
32	0.30 BI/R	Brake fluid level low